

# Sensor Soap Dispenser

## User's Guide

**KLEENMAC : MODEL :KSSD02SS**




- 1 Soap intel cover
- 2 + botton/ON
- 3 - button/OFF
- 4 Nozzle
- 5 Sensor lights
- 6 LED indictor
- 7 Dispensing tank
- 8 Battery compartment
- 9 Stand

## Safety Instructions

1. Please keep the surface of the unit clean. wipe the body with mop regularly to avoid long-term corrosion upon the unit.
2. Store manual in a safe place for future reference
3. Do not expose electronics under any circumstances. Do not attempt to repair the unit.
4. Do not wash the dispenser. Wipe clean with a damp cloth.
5. Avoid direct sunlight to the infrared panel.
6. **Strictly Keep always erect, otherwise the soap can easily get leaked through bottom**

## Assembly instructions

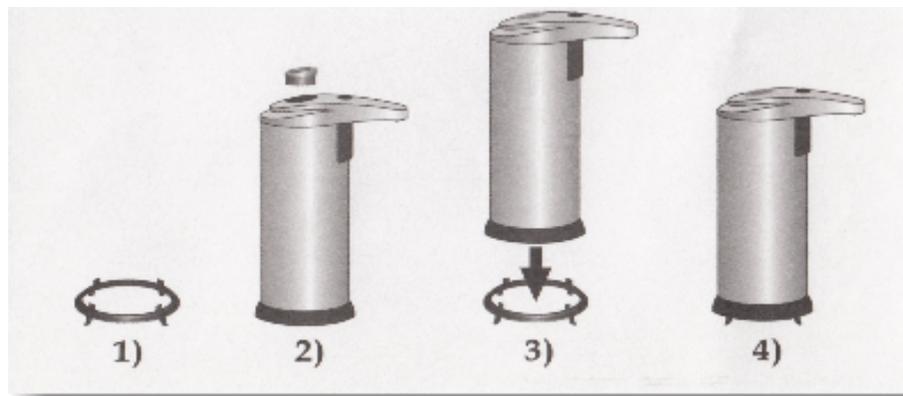

## Operation

1. Place batteries in the battery compartment as shown in diagram above. Please refer to Batteries section for instructions
2. Unlock the top cover by turning it anti-clockwise. Gently pull cover to remove. Fill the compartment with soap. Please make sure that the soap does not contain solid particles in order to avoid clogging.
3. To switch on, press and hold the “+” button for 1-2 seconds and do the same with “-” button to switch off.
4. To adjust volume of soap dispenser, press “+” button once to increase and press “-” to decrease
5. Repeat step 4 until the desired volume. There are 3 adjustable levels.
6. Place your hand under the sensor (light indicator) to dispense soap.

### **Battery Removal and Installation Instructions**

1. Unscrew the cover at the bottom of the unit and then remove the cap.
2. Insert 4 x AAA batteries into the compartment and make sure the polarity is correct. **DO NOT MIX OLD BATTERIES WITH NEW BATTERIES.**
3. Put the cover back into position and screw it back into place.
4. Please remove batteries if unit is not in use to avoid damage.

### **Battery Safety**

Batteries are small objects and must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the product and dispose of them properly. Remove batteries to prolong storage. Only batteries of the same or equivalent type as recommended are to be used.

**DO NOT** incinerate used batteries

**DO NOT** dispose of batteries in fire, as batteries may explode or leak

**DO NOT** mix old and new batteries or different types of batteries (eg. Alkaline/standard)

**DO NOT** recharge non-rechargeable batteries

**DO NOT** use rechargeable batteries as it may affect the proper operation of the product or cause it to mal-function or not function at all.

**DO NOT** short-circuit the supply terminals.